



## INSTALLATION MANUAL

### Digital I/O PCB

**EKRP1HBAA**




\*4PW54621-1 C 000000M\*


4PW54621-1C 09.2010

# \*KHBH/X


1

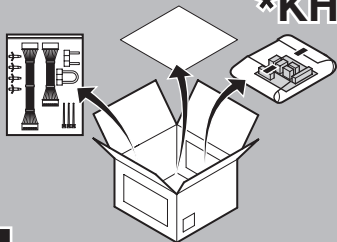


2

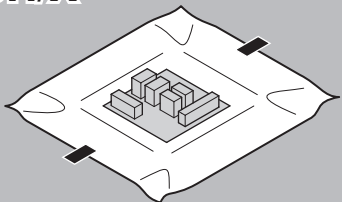


3

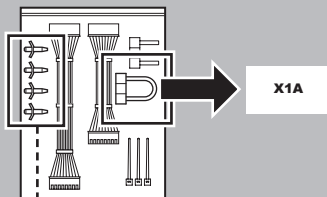


4

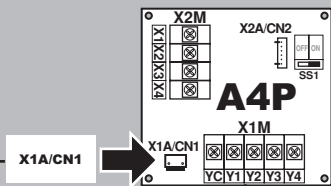


5

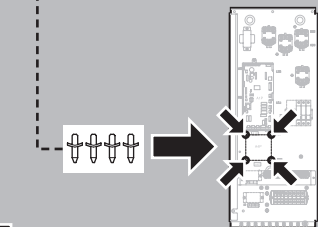

6

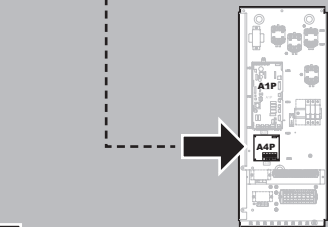








7

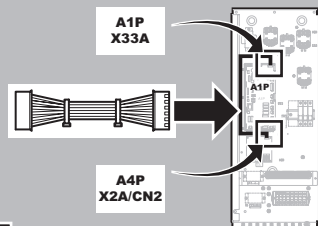

\*KHBH/X

EKRP1HBAA Digital I/O PCB  
Installation manual 4PW54621-1C


\*(D/B)(H/L)

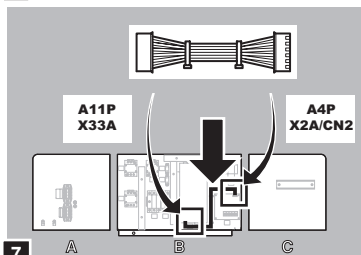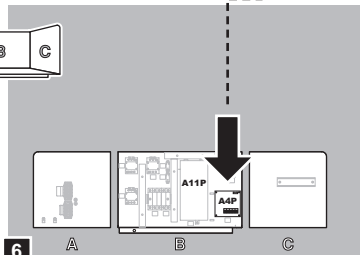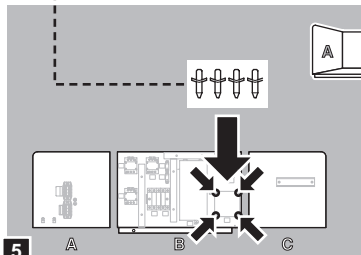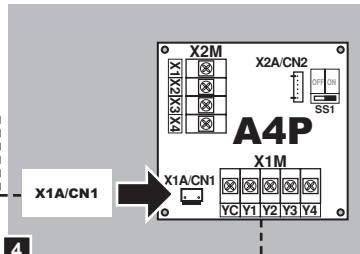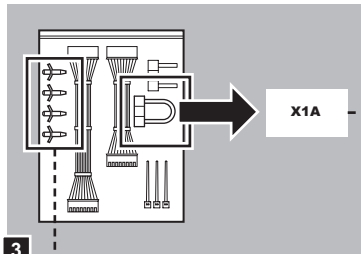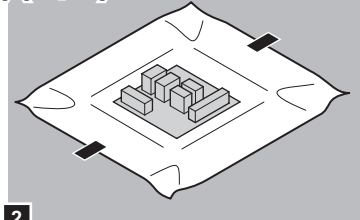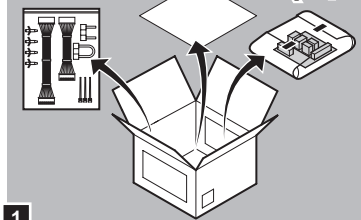


EKRP1HBAA Digital I/O PCB  
Installation manual 4PW54621-1C

# EKHVH/X


1

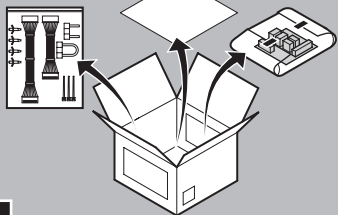


2

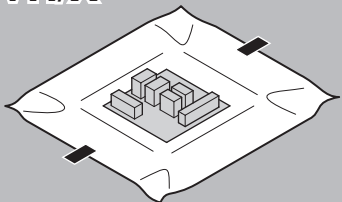


3

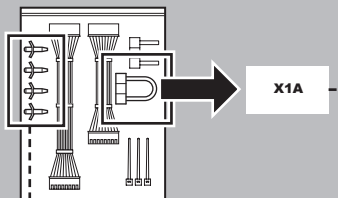


4

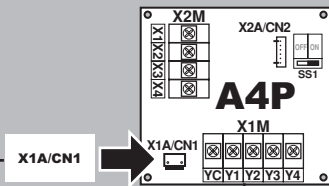


5

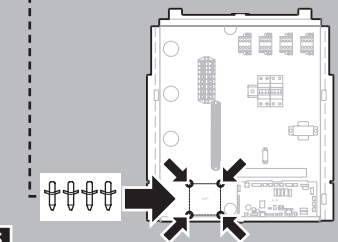

6

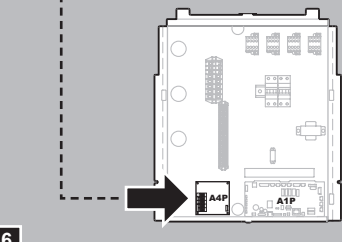


7

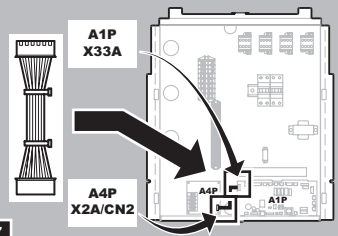


EKRP1HBAA Digital I/O PCB  
Installation manual 4PW54621-1C

# EBHQ+EKCBH/X


1

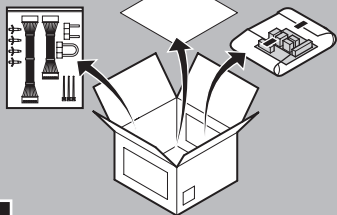


2

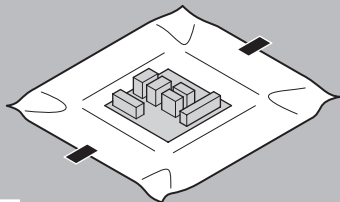


3

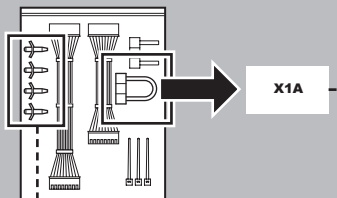


4

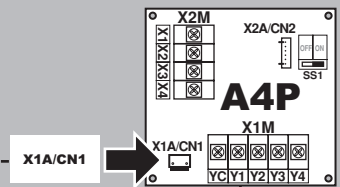


5

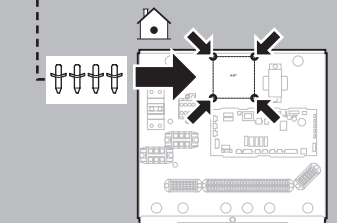

6






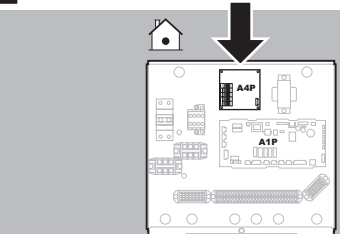


7

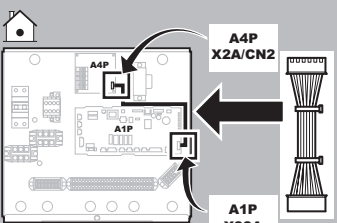

EKRP1HBAA Digital I/O PCB  
Installation manual 4PW54621-1C







# \*KHBRD\*AA

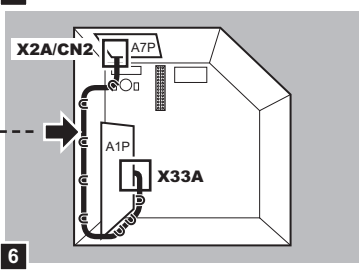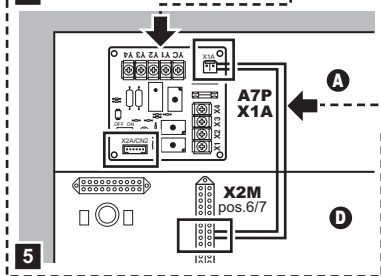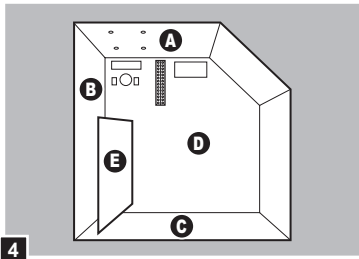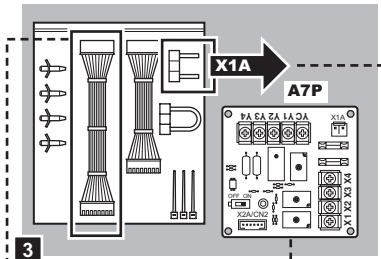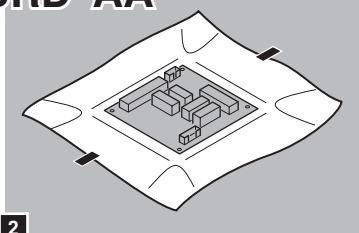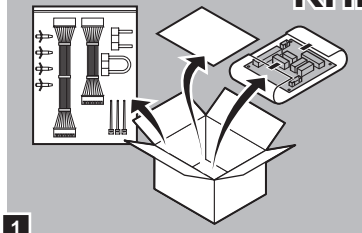

EKRP1HBAA Digital I/O PCB







Installation manual 4PW54621-1C

# \*KHBRD\*ABV1

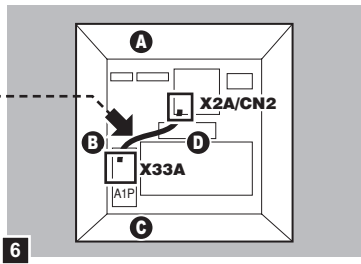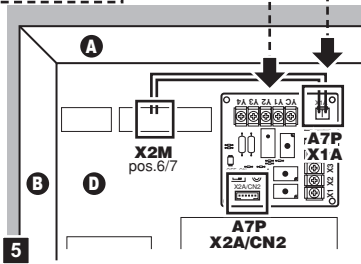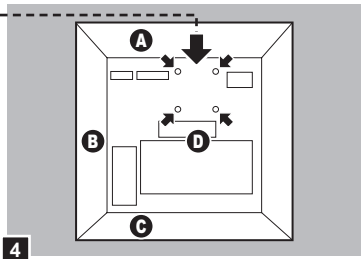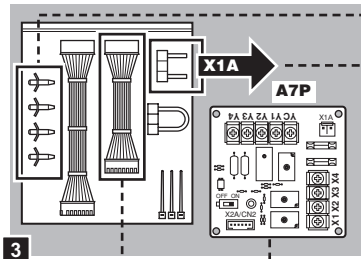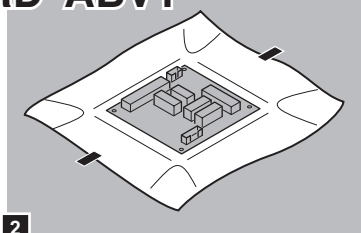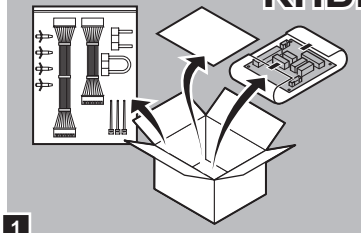

EKRP1HBAA Digital I/O PCB  
Installation manual 4PW54621-1C







# \*KHDRD\*ABY1

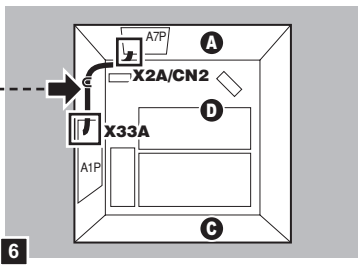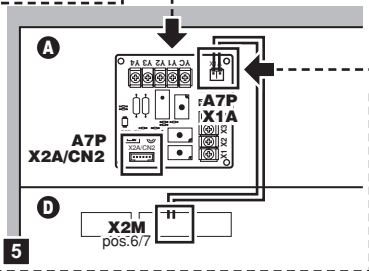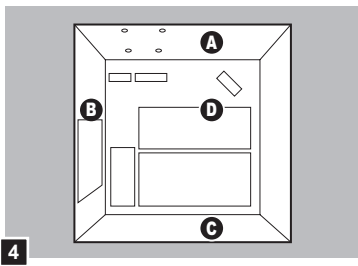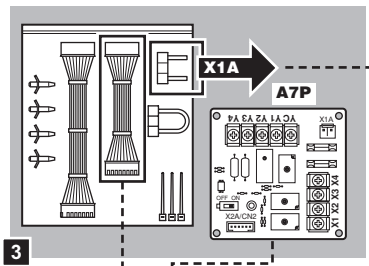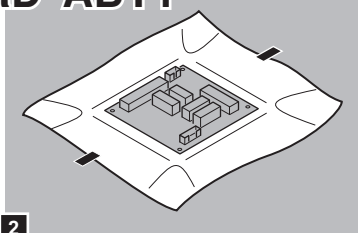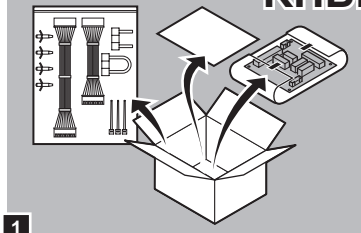

**EKRP1HBAA Digital I/O PCB**  
Installation manual 4PW54621-1C




# EKHVM\*

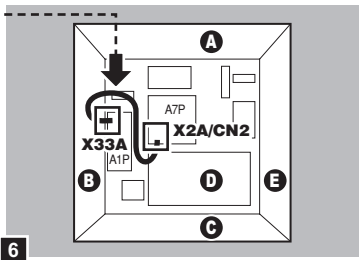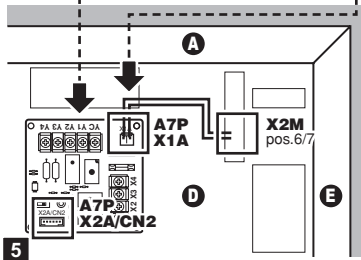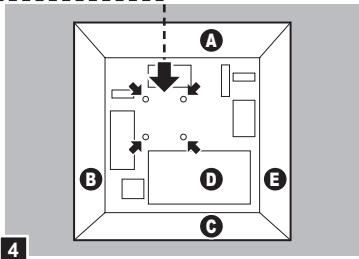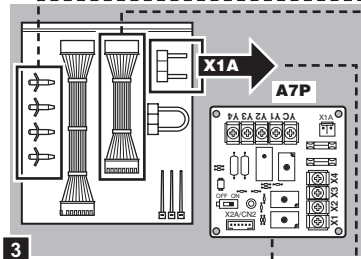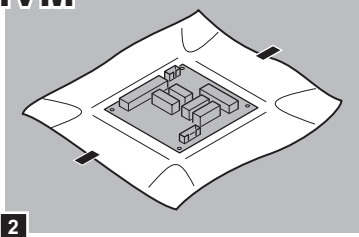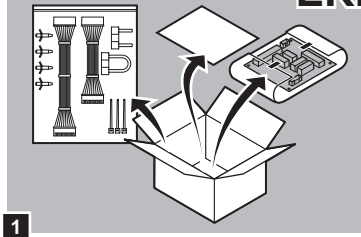


**EKRP1HBAA Digital I/O PCB**

Installation manual 4PW54621-1C

# NOTES

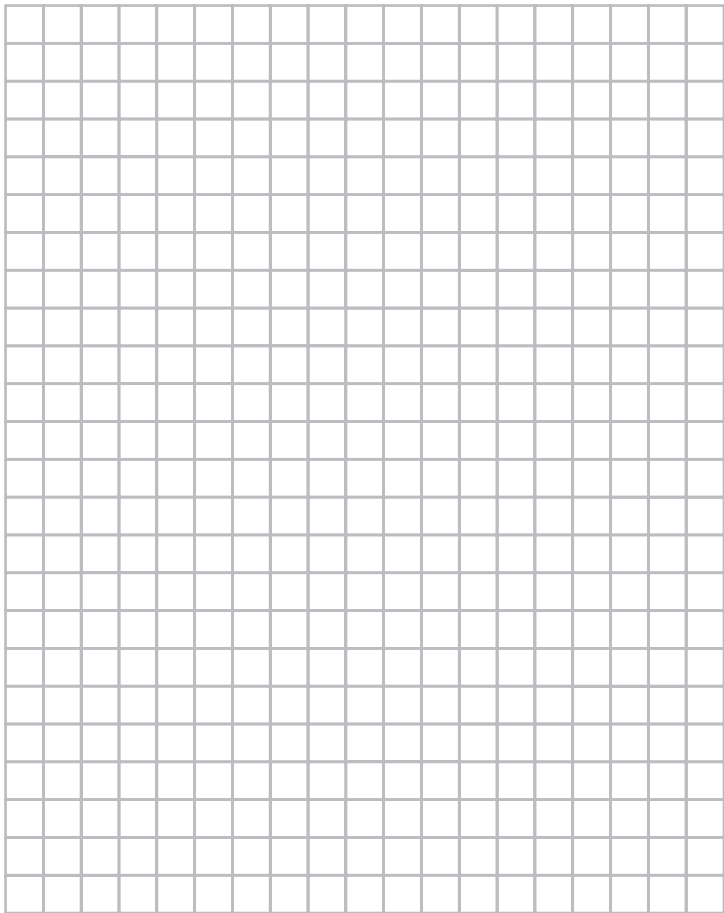

# NOTES

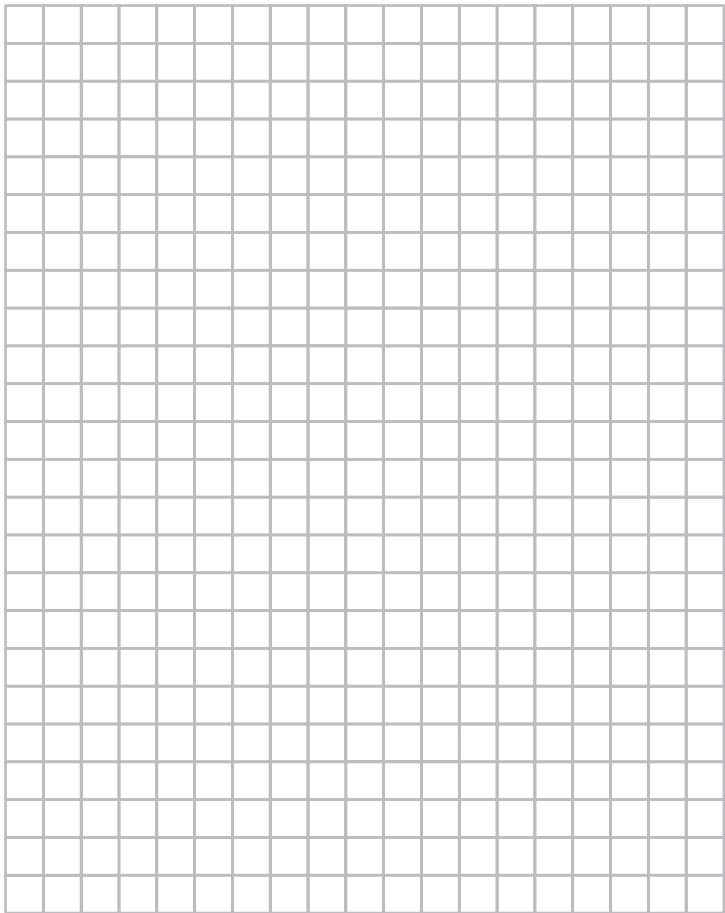

**DAIKIN EUROPE N.V.**

Zandvoordestraat 300, B-8400 Oostende, Belgium